



## INSTALLATION GUIDE



# TABLE OF CONTENTS

- 02 EQUIPMENT NEEDED
- 05 SITE SET-UP
- 06 APPLICATION SET-UP
- 07 APPLICATION
- 08 COMMON QUESTIONS
- 09 WARRANTIES



# EQUIPMENT NEEDED

## SUGGESTED EQUIPMENT TO GET STARTED

1

Dewalt or like 4 gallon backpack sprayer and nozzles



2

Empty 5 gallon bucket and stir stick for mixing



3

Ladder Stabilizer



4

Ladder Hoist



# EQUIPMENT NEEDED CONT.

---

## SUGGESTED EQUIPMENT TO GET STARTED

5

Chalk line and  
measuring tape




6

Proper safety  
equipment



7

Soft soled shoes  
or coverings

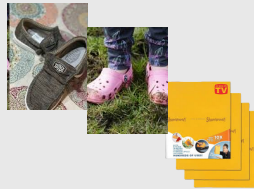

8

Water Hose  
and bib key



# EQUIPMENT NEEDED CONT.

---

HERE ARE SOME OTHER THINGS THAT WILL MAKE IT EASIER!

- Leaf Blower
- Shop Broom
- 10x20 Tarps
- Duct Tape
- New Pig Oil Absorbent (for clean up on gutters/ etc)
- Industrial Garbage bags for downspout clean up
- GOAT
- 100 ft water hose with nozzle and mobile reel
- Warner Shield holder and plastic cardboard to protect roof to wall transitions
- Pitchhopper
- Painter tape and paper for skylights, windows, etc

# SITE SET-UP

---

***Taking the time at the beginning to have the proper set-up will allow for time efficiency when applying.***

- 1 When you arrive on site, locate the safest place to set up your ladder that is near your water source. You can premix in 5 gallon buckets and not need to have access to water on site
- 2 Next, set- up your ladder, properly securing it to the roof with a ladder stabilizer
- 3 Plan your path by marking off 4 sq areas using your tape and chalk line. Keep in mind that once an area is sprayed you want to avoid stepping on it as it will scuff very easily. Keep this in mind with attaching anchors for ropes and harness safety. Mapping a path to ensure you are moving top to bottom is critical
- 4 Tarp or cover skylights, window wells to prevent over spray, if you do need to walk on the treated areas, use soft soled shoes like hey dudes or crocks, or put a “shamwow” over your regular shoes, and move slowly and deliberately
- 5 After, set-up the ladder hoist, so you can safely get the full back pack up to the roof safely

# APPLICATION SET-UP

---

Now let's get ready to apply

- 1 Get out your backpack, ensure your batteries are charged. Attach the high volume wide fan nozzle for best coverage.
- 2 Grab your mixing bucket, 2 gallons of rejuvaroofs rejuvenator, and water. In mixing bucket, add 2 gallons of rejuv and 2 gallons of water and mix thoroughly for 1-2 minutes
- 3 Once you have thoroughly mixed the water and solution, pour it into the sprayer.
- 4 Attach the backpack to the hoist and walk with the rope up the ladder, temp securing the rope to the ladder while you set your anchors set, rope attached and harness on. Go back to the ladder, grab the rope and hoist the backpack up.
- 5 Put on the backpack, keeping in mind your center of gravity will change with the weight on your back.

# APPLICATION

---

## Time to rejuvenate the roof

- 1 With your full back pack and properly and safely tied off, go over to the first 4 sq section you marked off.
- 2 Starting at the top of the area use the sprayer to evenly distribute the rejuv moving in a side to side motion.
- 3 It may feel like you are applying too much, but the saturation is heavy. (Protip: try building a test sq on the ground to see proper saturation and how much rejuv is used per sq)
- 4 Once the 4 sq area is saturated and your backpack is empty, repeat steps 2-5 on previous page until roof is complete
- 5 Avoid walking on the roof for 5-7 days to allow for full saturation. If you need to remove any tarping or coverings, use soft soled shoes, or a “shamwow” type cloth over shoe sole.

# COMMON QUESTIONS

---



Do I need to clean the roof in advance?

*All debris should be removed. Using a hand blower makes that easy and simple. As far as organic material like algae, if you want quick results, we recommend cleaning with the roof with sodium percarbonate mixed with water and sprayed the same way in your sprayer.*



If I clean the roof do I need to wait for it to dry?

*No, you don't, but you do need to rinse the sodium percarbonate off. The sodium percarbonate does not interfere with the rejuvenator.*

# WARRANTY INFORMATION

## REJUVA ROOFS RESIDENTIAL LIMITED PRODUCT WARRANTY

Building Name/Identification: AAABBB Authorized Independent Installer: AAABBB

Company/Owner Name: \_\_\_\_\_ Street Address: \_\_\_\_\_

City: \_\_\_\_\_ State: \_\_\_\_\_ Zip Code: \_\_\_\_\_

Warranty #: P40000 Surface Area: \_\_\_\_\_ sq. ft. Date of Installation: \_\_\_\_\_

Rejuva Roofs, LLC (hereinafter referred to as "REJUVA") warrants for 10 years from the date stated above that the materials manufactured for the application referenced above are produced at time of manufacture according to the then current published Rejuva Technical Data sheet.

Products must be applied by a REJUVA authorized independent installer in strict accordance with the REJUVA written Installation Guideline for the appropriate residential application and the instructions on the product label for the specified existing roof surface for this Warranty to apply, following proper surface preparation, application requirements, and maintenance. **THIS WARRANTY IS VALID WHEN ISSUED FOR RESIDENTIAL ROOFS ONLY.** Proper preparation and application includes, among other things, the requirement that the roof be cleaned to a clean, dry, sound substrate and surface during weather appropriate for coating application as detailed in the Installation Guideline for the specific surface type it has been applied to. This limited warranty covers materials only and specifically excludes labor.

**THIS WARRANTY IS OWNER'S EXCLUSIVE WARRANTY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE.**

The obligation of REJUVA shall be limited to the replacement of the portion of REJUVA material that is not manufactured to specification, FOB Cleveland, Ohio, and shall be the obligation of REJUVA. Any product replacement shall be warranted for the longer of one year or the duration of the original Limited Warranty. Damage resulting from vandalism, foot traffic not previously authorized by REJUVA, or other damage by other mechanical means is hereby excluded. Damage from non-representative mechanical means, ponding water, physical damage, moisture within the substrate, application to inappropriate surfaces, movement of heated pipes below the roof, or to the coating substrate at any time is specifically excluded.

No representative, employee or agent of REJUVA or any other person, is authorized to assume for REJUVA any other or additional liability or responsibility for Rejuva unless it is in writing and signed by an authorized officer of REJUVA ROOFS, LLC.

Should the materials prove to be manufactured outside of specification, the purchaser must contact REJUVA, in writing, providing dated proof of purchase (the job contract) and a list of the materials, or 12 months from the label on each REJUVA pail top, or other satisfactory proof of purchase.

**THIS WARRANTY IS ENTERED INTO IN THE STATE OF KANSAS AND MUST BE CONSTRUED AND INTERPRETED EXCLUSIVELY ACCORDING TO THE LAWS OF THE STATE OF KANSAS.** All parties hereto consent to submit to jurisdiction in the state of Kansas. If any provision of this contract violates any applicable laws, that provision is stricken with all other provisions herein remaining in full force and effect. There are no other contracts, promises or understandings, written, spoken, or implied in addition to those stated in this agreement. This Limited Warranty is made to the original purchaser (Owner) and is transferable one time only.

**BY SIGNING THIS RESIDENTIAL LIMITED WARRANTY AGREEMENT BELOW, PURCHASER UNDERSTANDS AND ACKNOWLEDGES ACCEPTANCE OF ITS CONDITIONS.**

Owner's Representative	Rejuva Roofs, LLC
Name: _____	Name: Joseph W. Altizer
Title: _____	Title: President
Signature: _____	Signature: _____
Date: _____	Date: _____

\*New owner must inform us of the updated contact information with the Warranty number.

OMWL121827